


# **Proportional reducing valves**

digital, pilot operated, open loop

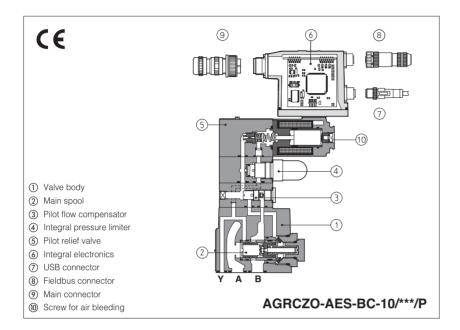

### AGRCZO-A, AGRCZO-AEB, AGRCZO-AES

Pilot operated digital proportional reducing valves for pressure open loop controls

#### Executions:

- A without integral driver, to be coupled with separated drivers, see section 2
- AEB with basic integral digital electronic driver, analog reference signals and USB port for software functional parameters setting
- AES with full integral digital electronic driver and fieldbus interface for functional parameters setting, reference signals and real-time diagnostics

The integral digital electronic driver performs the valve's hydraulic regulation according to the reference signal and assures valve-to-valve interchangeability thanks to the factory presetting

Seals material, see sect. 5, 6

= NBR

**PE** = FKM


Size: 10 and 20

Max flow: 160 and 300 l/min Max pressure: 350 bar

\*\*

Series

number

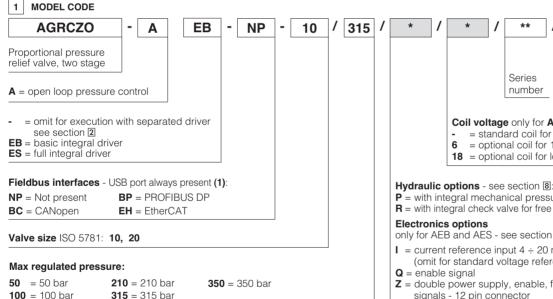

Coil voltage only for A - see section 10:
- = standard coil for 24V∞ Atos drivers
6 = optional coil for 12V∞ Atos drivers

**18** = optional coil for low current drivers


= with integral mechanical pressure limiter R = with integral check valve for free reverse flow

Electronics options
only for AEB and AES - see section 11:

- I = current reference input 4 ÷ 20 mA
  - (omit for standard voltage reference input  $0 \div 10 \text{ V}$ )
- = enable signal
- **Z** = double power supply, enable, fault and monitor signals - 12 pin connector

(1) Omit for A execution; **AEB** available only in version **NP**; AES available only in version BC, BP, EH

### Hydraulic symbol

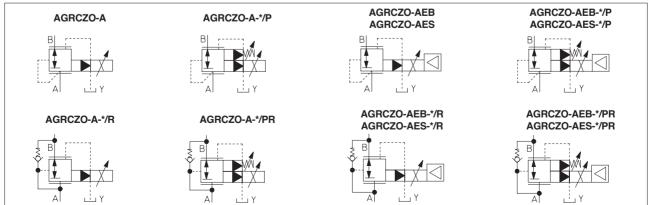

# 2 ELECTRONIC DRIVERS

Valve model		A							AEB	AES		
Drivers model	E-MI-A	AC-01F	E-BM-	4C-01F	E-ME-AC-01F	E-MI-	AS-IR	E-BM-	AS-PS	E-BM-AES	E-RI-AEB	E-RI-AES
Туре			Ana	alog						Digital		
Voltage supply (V <sub>DC</sub> )	12	24	12	24	24	12	24	12	24	24	2	4
Valve coil option	/6	std	/6	std	std	/6	std	/6	std	std	st	td
Format	plu to sol	g-in enoid	DIN 4 UND	13700 ECAL	EUROCARD	ARD plug-in to solenoid DIN-rail panel		Integral	to valve			
Data sheet	GO	010	GC	)25	G035	GC	20	GC	30	GS050	GS	115

Note: for main and communication connector see sections [14], [15]

# 3 GENERAL NOTES

AGRCZO proportional valve are CE marked according to the applicable Directives (e.g. Immunity/Emission EMC Directive and Low Voltage Directive). Installation, wirings and start-up procedures must be performed according to the general prescriptions shown in table F003 and in the installation notes supplied with relevant components.

# 4 FIELDBUS - only for AES

Fieldbus allows the direct communication of the proportional valve with machine control unit for digital reference signal, diagnostics and settings of functional parameters. Analog reference signal remain available on the main connector for quick commissioning and maintenance. For detailed information about fieldbus features and specification see tech table **GS510**.

# 5 MAIN CHARACTERISTICS - based on mineral oil ISO VG 46 at 50 °C

Assembly position	Any position				
Subplate surface finishing	Roughness index, Ra 0,4 flatness ratio 0,01/100 (ISO 1101)				
MTTFd valves according to EN ISO 13849	75 years, see technical table P007				
Ambient temperature range	A: standard = $-20^{\circ}\text{C} \div +70^{\circ}\text{C}$ , /BT option = $-40^{\circ}\text{C} \div +60^{\circ}\text{C}$ AEB, AES: standard = $-20^{\circ}\text{C} \div +60^{\circ}\text{C}$ , /BT option = $-40^{\circ}\text{C} \div +60^{\circ}\text{C}$				
Storage temperature range	A: standard =	= -20°C ÷ +80°C,	/BT option = -40°C ÷ -	<b>/BT</b> option = -40°C ÷ +70°C	
	AEB, AES: standard =	= -20°C ÷ +70°C,	<b>/BT</b> option = $-40^{\circ}$ C ÷ $-$	+70°C	
Coil resistance R at 20°C	Standard = $3 \div 3.3 \Omega$	Option $/6 = 2 \div 2,2$	Ω Option /18 :	= 13 ÷ 13,4 Ω	
Max. solenoid current	Standard = 2,6 A	Option /6 = 3,25 A	Option /18 :	= 1,5 A	
Max. power	<b>A</b> = 30 Watt <b>AE</b>	<b>B, AES</b> = 50 Watt			
Insulation class		curing surface temperature 2 must be taken into acc		the European standards	
Protection degree to DIN EN60529	IP66/67 with mating cor	nnectors			
Tropicalization (only REB, RES)	Tropical coating on ele-	ctronics PCB			
Duty factor	Continuous rating (ED=100%)				
EMC, climate and mechanical load	See technical table G004				
Communication interface (only REB, RES)	USB Atos ASCII coding	CANopen EN50325-4 + DS408	PROFIBUS DP EN50170-2/IEC61158	EtherCAT IEC 61158	
Communication physical layer (only REB, RES)	not insulated USB 2.0 + USB OTG	optical insulated CAN ISO11898	optical insulated RS485	Fast Ethernet, insulated 100 Base TX	
Valve size	1	10	2	20	
Max regulated pressure [bar]	50; 100; 210; 315; 350				
Min. regulated pressure (1) [bar]	1; 3 (only for /350)				
Max. pressure at port A or B [bar]	350				
Max. pressure at port Y [bar]	pilot drain always external, to be directly connected to tank at zero pressure			zero pressure	
Max. flow [I/min]	1	60	300		
Response time 0-100% step signal (2) (depending on installation) [ms]	≤ 45 ≤ 50			50	
Hysteresis [% of the max pressure]	≤ 2.0				
Linearity [% of the max pressure]	≤ 3,0				
Repeatability [% of the max pressure]	≤ 2,0				

 $\textbf{Notes:} \ \text{above performance data refer to valves coupled with Atos electronic drivers, see section } \ \underline{\textbf{2}}$ 

- (1) Min pressure value to be increased of T line pressure
- (2) Average response time value; the pressure variation in consequence of a modification of the reference input signal to the valve is affected by the stiffness of the hydraulic circuit: greater is the stiffness of the circuit, faster is the dynamic response

## 6 SEALS AND HYDRAULIC FLUID - for other fluids not included in below table, consult our technical office

Seals, recommended fluid temperature	NBR seals (standard) = $-20^{\circ}\text{C} \div +60^{\circ}\text{C}$ , with HFC hydraulic fluids = $-20^{\circ}\text{C} \div +50^{\circ}\text{C}$ FKM seals (/PE option) = $-20^{\circ}\text{C} \div +80^{\circ}\text{C}$ HNBR seals (/BT option) = $-40^{\circ}\text{C} \div +60^{\circ}\text{C}$ , with HFC hydraulic fluids = $-40^{\circ}\text{C} \div +50^{\circ}\text{C}$				
Recommended viscosity	20÷100 mm²/s - max allowed range 15 ÷ 380 mm²/s				
Fluid contamination class	ISO 4406 class 20/18/15 NAS 1638 class 9, achievable with in line filter - 10 μm (β10 ≥75 recommended)				
Hydraulic fluid Suitable seals type Classi			Ref. Standard		
Mineral oils	NBR, FKM, HNBR	HL, HLP, HLPD, HVLP, HVLPD	DIN 51524		
Flame resistant without water	FKM	HFDU, HFDR	- ISO 12922		
Flame resistant with water	NBR, HNBR	HFC	100 12322		


# 7 DIAGRAMS (based on mineral oil ISO VG 46 at 50 °C)


# 1 Regulation diagrams

with flow rate Q = 10 l/min

# 2 Pressure/flow diagrams

with reference pressure set with Q = 10 l/min

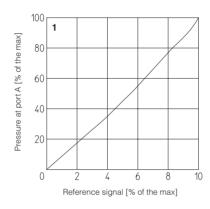

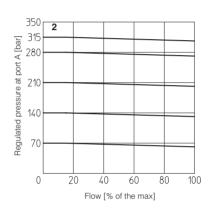


# **3-6 Pressure drop/flow diagrams** with zero reference signal


Differential pressure B→A

- **3** = AGRCZO-\*-10
- **4** = AGRCZO-\*-20

Differential pressure A→B (through check valve)

- **5** = AGRCZO-\*-10/\*/R
- **6** = AGRCZO-\*-20/\*/R

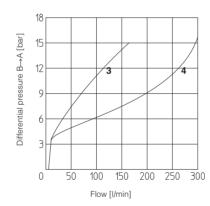

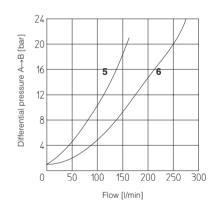

# 8 HYDRAULIC OPTIONS


# 8.1 Option /P - integral mechanical pressure limiter

The AGRCZO-\*/P are provided with mechanical pressure limiter acting as protection against overpressure. For safety reasons the factory setting of the mechanical pressure limiter is fully unloaded (min pressure).

At the first commissioning it must be set at a value lightly higher than the max pressure regulated with the proportional control.

For the pressure setting of the mechanical pressure limiter, proceed according to following steps:


- apply the max reference input signal to the valve's driver. The system pressure will not increase until the mechanical pressure limiter remains unloaded.
- turn clockwise the adjustment screw ① until the system pressure will increase up to a stable value corresponding to the pressure setpoint at max reference input signal.
- turn clockwise the adjustment screw ① of additional 1 or 2 turns to ensure that the mechanical pressure limiter remains closed during the proportional valve working.

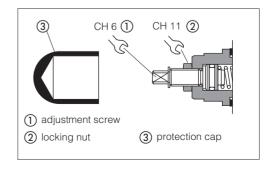

#### 8.2 Option /R - integral check valve for free reverse flow

The AGRCZO-\*/ $\bf R$  are provided with integral check valve for free reverse flow  $\bf A \! \rightarrow \! \bf B$ 


- ① Check valve cracking pressure = 0,5 bar
- 2 Plug

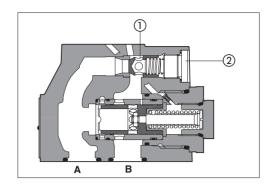

### 9 AIR BLEEDING

At the first valve commissioning the air eventually trapped inside the solenoid must be bled-off through the screw ① located at the rear side of the solenoid housing.

The presence of air may cause pressure instability and vibrations.

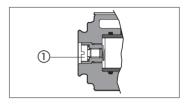

## 10 OPTIONS for -A

#### 10.1 Coil voltage

Option /6 optional coil to be used with Atos drivers with power supply 12 Vpc Option /18 optional coil to be used with electronic drivers not supplied by Atos

# 11 ELECTRONIC OPTIONS - for AEB and AES

Standard driver execution provides on the 7 pin main connector:

Power supply

24 Vpc must be appropriately stabilized or rectified and filtered; a 2,5 A safety fuse is required in series to each driver power supply. Apply at least a 10000 μF/40 V capacitance to single phase rectifiers or a 4700 μF/40 V capacitance to three phase rectifiers

Reference input signal - analog differential input with 0÷+10 Vpc nominal range (pin D,E), proportional to desired valve pressure regulation

Monitor output signal - analog output signal proportional to the actual valve's coil current (1V monitor = 1A coil current)

Note: a minimum booting time of 500 ms has be considered from the driver energizing with the 24 Vpc power supply before the valve has been ready to operate. During this time the current to the valve coils is switched to zero.

#### 11.1 Option /I

It provides 4 ÷ 20 mA current reference signal, instead of the standard 0÷+10 Vpc.

Input signal can be reconfigured via software selecting between voltage and current, within a maximum range of ±10 V or ±20 mA.

It is normally used in case of long distance between the machine control unit and the valve or where the reference signal can be affected by electrical noise; the valve functioning is disabled in case of reference signal cable breakage

#### 11.2 Option /Q

To enable the driver, supply 24 Vpc on pin C referred to pin B: Enable input signal allows to enable/disable the current supply to the solenoid, without removing the electrical power supply to the driver; it is used to maintain active the communication and the other driver functions when the valve has to be disabled. This condition does not comply with European Norms EN13849-1 (ex EN954-1).

It provides, on the 12 pin main connector, the following additional features:

To enable the driver, supply 24 Vpc on pin 3 referred to pin 2: Enable input signal allows to enable/disable the current supply to the solenoid, without removing the electrical power supply to the driver; it is used to maintain active the communication and the other driver functions when the valve has to be disabled. This condition does not comply with European Norms EN13849-1 (ex EN954-1).

#### **Fault Output Signal**

Fault output signal indicates fault conditions of the driver (solenoid short circuits/not connected, reference signal cable broken for 4÷20mA input, etc.). Fault presence corresponds to 0 Vpc, normal working corresponds to 24 VDC (pin 11 referred to pin 2): Fault status is not affected by the Enable input signal

#### Power supply for driver's logics and communication

Separate power supply (pin 9,10) allow to cut solenoid power supply (pin 1,2) while maintaining active diagnostics, serial and fieldbus communication. A safety fuse is required in series to each driver power supply: 500 mA fast fuse.

#### 11.4 Possible combined options: /IQ. /IZ

### 12 PROGRAMMING TOOLS - see tech table GS500

Valve's functional parameters and configurations, can be easily set and optimized using Atos E-SW programming software connected via USB port to the digital driver. For fieldbus versions, the software permits valve's parameterization through USB port also if the driver is connected to the central machine unit via fieldbus.

The software is available in different versions according to the driver's options:


**E-SW-BASIC** support: NP (USB) PS (Serial) IR (Infrared) **E-SW-FIELDBUS** support: BC (CANopen) BP (PROFIBUS DP) EH (EtherCAT)

EW (POWERLINK) E-SW-\*/PQ support: valves with SP, SF, SL alternated control (e.g. E-SW-BASIC/PQ)

# WARNING: drivers USB port is not isolated!

The use of isolator adapter is highly recommended for PC protection (see table GS500)

# USB connection

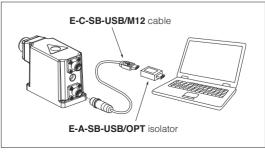

# 13 ELECTRONIC CONNECTIONS

# 13.1 Main connector signals - 7 pin - standard and /Q option - AGRCZO-AEB and AGRCZO-AES (A1)

PIN	Standard	/Q	TECHNICAL SPECIFICATIONS	NOTES
Α	V+		Power supply 24 Vbc Rectified and filtered: VRMs = 20 ÷ 32 VMAX (ripple max 10 % VPP)	Input - power supply
В	V0		Power supply 0 Vpc	Gnd - power supply
С	AGND		Analog ground	Gnd - analog signal
		ENABLE	Enable (24 Vpc) or disable (0 Vpc) the driver, referred to V0	Input - on/off signal
D	INPUT+		Pressure reference input signal: ±10 Vpc / ±20 mA maximum range Defaults are 0 ÷ 10 Vpc for standard and 4 ÷ 20 mA for /l option	Input - analog signal Software selectable
Е	INPUT-		Negative reference input signal for P_INPUT+	Input - analog signal
F	MONITOR referred to: AGND   V0		Pressure monitor output signal: ±5 Vpc maximum range Default is 0 ÷ 5 Vpc (1V = 1A)	Output - analog signal Software selectable
G	EARTH		Internally connected to driver housing	

# 13.2 Main connector signals - 12 pin - /Z option - AGRCZO-AEB and AGRCZO-AES $\begin{picture}(A)\end{picture}$

PIN	/Z	TECHNICAL SPECIFICATIONS	NOTES		
1	V+	Power supply 24 Vpc Rectified and filtered: Vpms = 20 ÷ 32 Vmax (ripple max 10 % Vpp)	Input - power supply		
2	V0	Power supply 0 Vpc	Gnd - power supply		
3	ENABLE	Enable (24 Vpc) or disable (0 Vpc) the driver, referred to V0	Input - on/off signal		
4	INPUT+	Pressure reference input signal: ±10 Vpc / ±20 mA maximum range Defaults are 0 ÷ 10 Vpc for standard and 4 ÷ 20 mA for /I option	Input - analog signal Software selectable		
5	INPUT-	Negative reference input signal for P_INPUT+	Input - analog signal		
6	MONITOR	Pressure monitor output signal: ±5 Vpc maximum range Defaults is 0 ÷ 5 Vpc (1V = 1A)	Output - analog signal <b>Software selectable</b>		
7	NC	Do not connect			
8	NC	Do not connect			
9	VL+	Power supply 24 Vpc for driver's logic and communication	Input - power supply		
10	VL0	Power supply 0 Vpc for driver's logic and communication	Gnd - power supply		
11	FAULT	Fault (0 Vpc) or normal working (24 Vpc), referred to V0 Output - on/of			
PE	EARTH	Internally connected to driver housing			

# 13.3 Communication connectors - AGRCZO-AEB B and AGRCZO-AES B C

В	B USB connector - M12 - 5 pin always present					
PIN	SIGNAL	SIGNAL TECHNICAL SPECIFICATION (1)				
1	+5V_USB	V_USB Power supply				
2	ID	Identification				
3	GND_USB	Signal zero data line				
4	D-	Data line -				
5	D+	Data line +				

C2	©2) BP fieldbus execution, connector - M12 - 5 pin (2)						
PIN	SIGNAL TECHNICAL SPECIFICATION (1)						
1	+5V Termination supply signal						
2	LINE-A	Bus line (high)					
3	DGND	Data line and termination signal zero					
4	LINE-B	Bus line (low)					
5	SHIELD						


©1	©1) BC fieldbus execution, connector - M12 - 5 pin (2)						
PIN	SIGNAL	TECHNICAL SPECIFICATION (1)					
1	CAN_SHLD	Shield					
2	NC	do not connect					
3	CAN_GND	Signal zero data line					
4	CAN_H	Bus line (high)					
5	CAN_L	Bus line (low)					

©3 ©4 EH fieldbus execution, connector - M12 - 4 pin (2)					
PIN	SIGNAL TECHNICAL SPECIFICATION (1)				
1	TX+	Transmitter			
2	RX+	Receiver			
3	TX-	Transmitter			
4	RX-	Receiver			
Housing	SHIELD				


Notes: (1) shield connection on connector's housing is recommended (2) only for AES execution

# 13.4 Solenoid connection - only for AGRCZO-A

		·	
PIN	SIGNAL	TECHNICAL SPECIFICATION	Connector code 666
1	COIL	Power supply	253
2	COIL	Power supply	
3	GND	Ground	

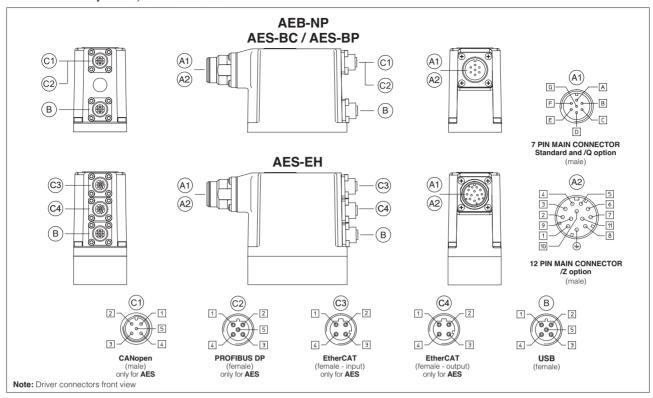

### 14 CONNECTORS

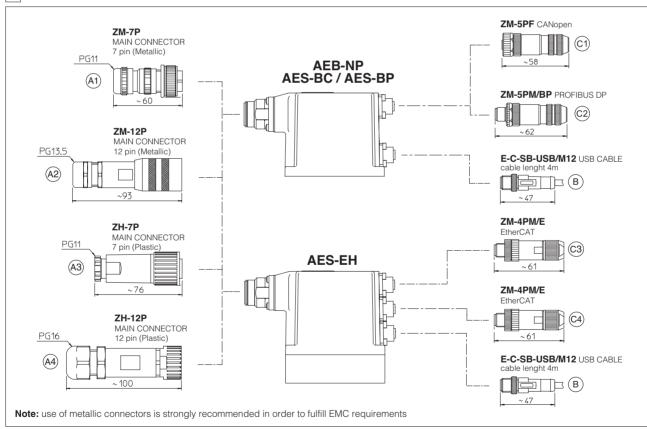

# 15 MODEL CODES OF MAIN CONNECTORS AND COMMUNICATION CONNECTORS - to be ordered separately

VALVE VERSION	A (1) Power supply	AEB AES	AEB/Z AES/Z	BC - CANopen	BP - PROFIBUS DP	EH - EtherCAT
CONNECTOR CODE	666	ZM-7P (A1)	ZM-12P (A2)	ZM-5PF ©1)	ZM-5PM/BP ©2	ZM-4PM/E ©3
		ZH-7P (A3)	ZH-12P (A4)			ZM-4PM/E C4
PROTECTION DEGREE	IP67			IP67		
<b>DATA SHEET</b> K500 GS115, K500						

only for AES

### **SIZE 10**


#### ISO 5781: 2000


Mounting surface: 5781-06-07-0-00 (see table P005)

Fastening bolts: 4 socket head screws M10x45 class 12.9 Tightening torque = 70 Nm Seals: 2 OR 109/70; 2 OR 3068 Diameters of ports A, B: Ø = 14 mm Diameters of ports X, Y: Ø = 5 mm

wass [kg]							
	Α	AEB, AES	AES-EH				
AGRCZO-*-10	5,0	5,6	5,7				
Option /P	+0,5						


# AGRCZO-A-10 standard and /R

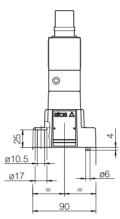

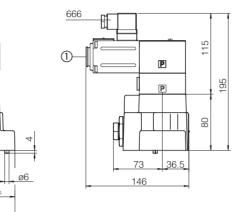


## AGRCZO-AEB-NP-10


standard and /R

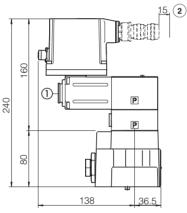



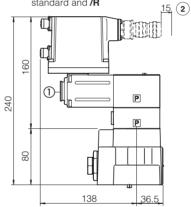

# AGRCZO-AES-EH-10 standard and /R

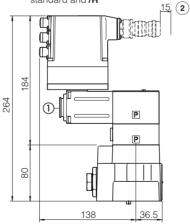

### Option /P

8

- ① = Screw for air bleeding: at the first valve commissioning the air eventually trapped inside the solenoid must be bled-off through the screw ①
- 2 = Space to remove the 7 or 12 pin main connector. For main and communication connectors see section [14], [15]

### **SIZE 20**

ISO 5781: 2000

Mounting surface: 5781-08-10-0-00 (see table P005)

Fastening bolts:

Fastening bolts:


4 socket head screws M10x45 class 12.9

Tightening torque = 70 Nm

Seals: 2 OR 109/70; 2 OR 4100

Diameters of ports A, B: Ø = 22 mm


Diameters of ports X, Y: Ø = 5 mm

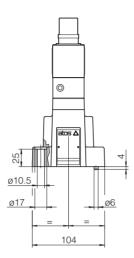


# Mass [kg]

	Α	AEB, AES	AES-EH
AGRCZO-*-20	7,5	8,1	8,2
Option /P	+0,5		

# AGRCZO-A-20 standard and /R

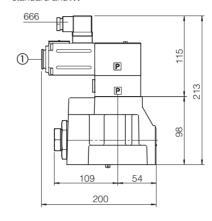


# AGRCZO-AEB-NP-20 standard and /R

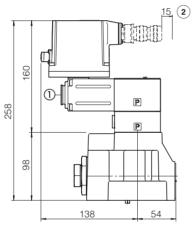


# AGRCZO-AES-BC-20 AGRCZO-AES-BP-20


standard and /R

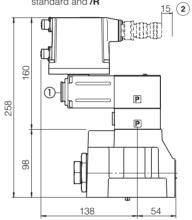

# AGRCZO-AES-EH-20 standard and /R

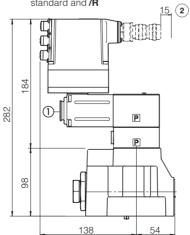

### Option /P

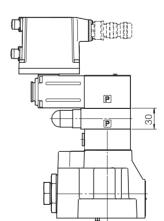

- ① = Screw for air bleeding: at the first valve commissioning the air eventually trapped inside the solenoid must be bled-off through the screw ①
- 2 = Space to remove the 7 or 12 pin main connector. For main and communication connectors see section 14, 15