# 6.4.1 TECHNICAL DATA

MAX OPERATING PRESSURE (PS): 375 bar

PRESSURE TEST (PT): 1.43 x PS NOMINAL CAPACITIES: 0.1 ÷ 1000 litres WORKING TEMPERATURE: -50 ÷ +150 °C

BODY MATERIAL: - carbon steel shell painted with rust inhibitor RAL 8012

- nickel coating 25 - 40 μ


FLUID PORT CONNECTION: upon request

WEIGHT: see Table 6.4d

#### **6.4.2 DESCRIPTION**


Additional bottles type AB consist of a pipe of high-tensile steel. The same pipe of the piston accumulator type AP.

The additional bottles are used to take in and store nitrogen to increase the gas volume in the accumulator station (with bladder or piston accumulator). This means that smaller accumulators can be used for the same gas volume and costs can be reduced. EPE offers a wide selection of bottless type, such as forged "B" version, shell of bladder accumulator "ASS" and "ASSA" version or body piston type "AB" version.

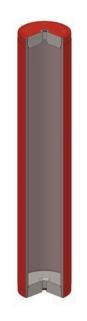

#### 6.4.3 "AB" ADDITIONAL CYLINDERS ADVANTAGES

- compact
- simple construction
- quick, easy installation
- large volume

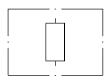

6.4.4 HYDRAULIC SYMBOL

6.4b


### 6.4.5 SEALS-TEMPERATURE-LIQUID COMPATIBILITY

When selecting the additional cylinder variant, pay attention to the following non-binding notes with regard to hydraulic fluid, seals material and the permissive temperature range. (see Section)

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
P	Standard nitrile (Perburan)	NBR	-20 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
F	Low temperature nitrile	NBR	-40 ÷ +70	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
K	Hydrogenated nitrile	HNBR	-30 ÷ +130	The same as with standard nitrile but with excellent performance at high and low temperatures.
L	Hydrogenated nitrile	HNBR	-60 ÷ +130	The same as with standard nitrile but with excellent performance at high and very low temperatures.
V	Fluorocarbon	FKM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.

For other hydraulic fluid and/or temperatures, please consult us.



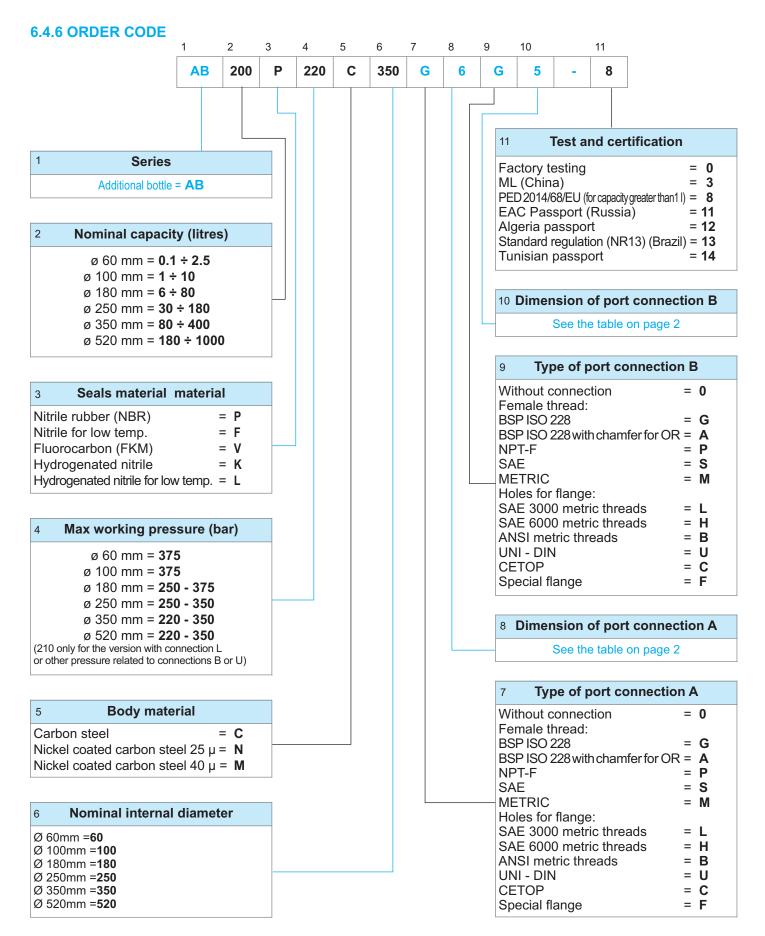



# **Dimension of port connection A**

```
Without connection = 0
For the type of connection:
G-A-P-L-H 1/8" = 1
           1/4" = 2
           3/8" = 3
           1/2" = 4(std. DN 60)
           3/4" = 5
             1" = 6(std. DN 100)
          1"1/4 = 7
          1"1/2 = 8 \text{ (std. DN } 180-250-350)
             2" = 9(std. DN 520)
          2"1/2 = 10
             3" = 11
          3"1/2 = 12
             4" = 13
S = Diameter "inch"-Pitch "inch"
    Former. 9/16-18 = 9/16-18
M = Diameter/pitch
    Former. M 22x1.5 = 22/1.5
```

B = Dimension/Rating

Former. 4" ANSI 300 = 4/300

U = DN/PN

Former. DN100 PN16 = 100/16

C = Diameter "inch"/max Pressure "bar"

Former. 3"Cetop 400 = 3/400

F = to specify and EPE will assign a number

# Dimension of port connection B

```
Without connection = 0
For the type of connection:
G-A-P-L-H 1/8" = 1
           1/4" = 2
           3/8" = 3
            1/2" = 4 (std. DN 60)
           3/4" = 5
             1" = 6 (std. DN 100)
          1"1/4 = 7
           1"1/2 = 8 (std. DN 180-250-350)
             2" = 9 \text{ (std. DN 520)}
          2"1/2 = 10
             3" = 11
          3"1/2 = 12
             4" = 13
```

S = Diameter "inch" - Pitch "inch"

Former. 9/16-18 = 9/16-18

M = Diameter/pitch

Former. M 22x1.5 = 22/1.5

B = Dimension/Rating

Former. 4" ANSI 300 = 4/300

U = DN/PN

Former. DN100 PN16 = 100/16

C = Diameter "inch"/max Pressure "bar"

Former. 3"Cetop 400 = 3/400

F = to specify and EPE will assign a number

# **6.4.7 EUROPE MARKET**

All hydraulic bottles are pressure vessels and are subject to the national regulations and directives valid at the place of installation.

For additional cylinders type AB, every shipping batch is complete of a conformity declaration and instructions of use and maintenance and/or all documents requested. All vessel categories (see Table 6.4d) must be protected by means of a pressure relief valve in accordance with Directive 2014/68/EU.

#### 6.4.8 ACCESSORIES

For support equipment, see Cap. 7 For gas side's safety equipment, see Cap. 8 For pre-loading and charging set, see Cap. 11 For other components, see Cap. 12



# **6.4.9 DIMENSIONS**


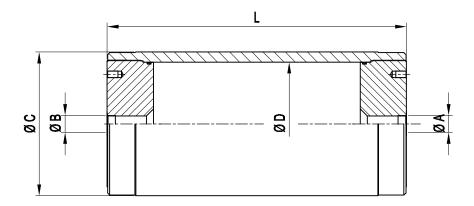


Fig. I



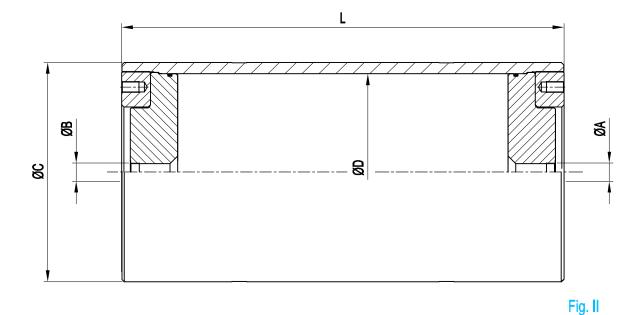

Accumulator type APXXX	Fig	Gas capacity liters	Working pressure bar	Ped category for the	Maximum differential pressure	ØA	ØB	ØC mm	ØD mm	L	Dry Weigh Kg			
Ø bore (ØD)				liquids of group 2	bar						220 bar	250 bar	350 bar	375 bar
		0,25		Art III (III)						169				4,9
		0,5								257				6,4
60		1	375		300	M12 x 1,5	1/2" BSP	80	60	434				9,5
		1,5	_	II						611				12,5
		2								788				15,5
		1								240				17,1
		1,5		l II						303				20,1
		2	_							368 430				22,5 25,1
		2,5	_							494				27,9
		4	375	III	300					622				33,2
100	ı	5				M12 x 1,5	1" BSP	130	100	750				38,7
100	'	6	-							877				44,1
		8	-							1132				54,9
		10	-	IV						1387				65,5
		6								416		65,5		76
		8								495		71		83,5
		10	250		180,5			210		573		76,5		91,5
		15								770		90,5		110,5
		20					1 1/2"			966		104,5		130
180	1	25				M12 x 1,5			180	1163		118,5		149
		30		IV			BSP			1360		133		168,5
		40 50	375		240			220		1752 2145		161 189		207 245,5
		60	-							2538		197		240,0
		80	-							3324		217		361
													200 E	301
		30 40						000 5		849 1065		205	300,5	
		50	250		180			298,5		1280		240 274,5	353 405,5	
		60	-							1496		309,5	405,5	
250		80	-			M12 x 1,5	1 1/2"		250	1928		379,5	558	
230		100		IV			1 1/2			2359		449,5	663	
		120	350		220		BSP	324		2790		519,5	768	
		150	_							3457		624,5	925,5	
		180								4084		729	1083	
		100								1370	563		650	
		120	220		165			406		1592	625		726	
		150					1 1/2"			1924	718		840,5	
350		180	-	IV		M12 x 1,5			350	2256 2478	811		954,5	
		200 250	-				BSP			3032	873		1031	
		300	350		210			419		3586	1028 1183		1221 1411	
		400	-							4694	1493		1792	
		200								1298	1070		1454	
		250	222		120			584		1549	1196,5		1657	
		300	220		120					1800	1323		1860	
		350		IV						2050	1450		2062	
520	II	400				M12 x 1,5	2" BSP		520	2300	1576		2265	
		500			200					2800	1828		2671	
		600	350		200			622		3301	2081		3076	
		800								4302	2587		3888	
		1000								5304	3092		4699	6.40

<sup>\*</sup> The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles).



# **6.4.10 SPARE PARTS CODES**

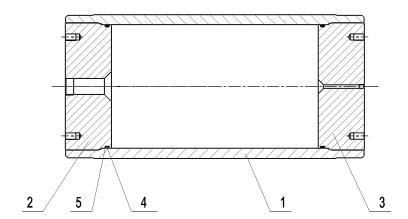


fig. I

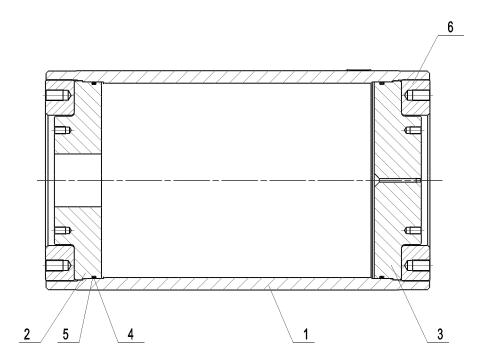


fig. II

6.4f

Pos.	Spare parts	Cylinder diameter	Fig.	Group code	Q.ty	Part description	Type / Code	
1		II.	Accumulator cylinder					
2		Not supplied as spa	Oil side cap	-				
3			Gas side cap					
4	Assumulator assists ast	60	I	B2471-1 *	2	O - ring	0010R6200 - *	
5	Accumulator gasket set				2	Anti-extrusion ring	0011P8329 - *	
4	Accumulator gasket set	100	I	B2472-1 *	2	O - ring	0010R0185 - *	
5					2	Anti-extrusion ring	0011P8341 - *	
4	Accumulator gasket set	180	I	B2473-1 *	2	O - ring	0010R0228 - *	
5					2	Anti-extrusion ring	0011P8439 - *	
4	A accompulator montret ant	250		B2474-1 *	2	O - ring	0010R8925 - *	
5	Accumulator gasket set				2	Anti-extrusion ring	0011P8447 - *	
4	A	350	ı	B2475-1 *	2	O - ring	0010R81300 - *	
5	Accumulator gasket set				2	Anti-extrusion ring	0011P8455 - *	
4	Accumulator gasket set	520		D2476 4 *	2	O - ring	0010R82000 - *	
5				B2476-1 *	2	Anti-extrusion ring	0011P8469 - *	
6		Not supplied as spa	re parts	Thread ring	-			

<sup>\*</sup> Gasket material 6.4g

# 6.4 E 03-17 ADDITIONAL BOTTLES type AB



#### **6.4.11 COMMISSIONING AND MAINTENANCE**

#### **Delivery condition**

The additional bottles type AB are shipped on pallets or wooden boxes upon request. Unless otherwise required, certificates and documentation are provided together with the bottles.

#### Handling

The original packaging is suitable for handling and storage.

Where necessary, you should use suitable lifting equipment to support the weight of the bottles.

However protect from impact the packaging and handle it with care.

#### Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

#### Marking on the nameplate of the additional cylinder

With reference to the PED 2014/68/EU classification, Article 3, Paragraph 3 and / or risk categories I or IV depending on the volume and maximum working pressure, the cylinder indicates the following data:

- logo, name and country of the manufacturer
- month / year of production
- product code
- serial number
- maximum PS pressure and PT test pressure in bar
- min. and max. TS working temperature in Celsius
- volume V in litres
- group of fluids allowed
- CE marking (by category I ÷ IV) with the identification number of the notified body

#### It is strictly forbidden to:

- weld, rivet, bolt or screw any item of the cylinder shell
- engrave or permanently stamp the surfaces of the cylinder shell and / or carry out other operations that could affect or change the mechanical properties of the cylinder
- use the cylinder as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or the cylinder without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

# Installation

Before installation, you must perform a visual check to verify that the bottles has not suffered any damage during shipping / handling.

Verify that the requested type matches with what stamped on the nameplate. We recommend using the additional bottles connected to the accumulator with a suitable safety valve (see Chapter 8). This device provides user and equipment protection against possible damages due to pressure peaks.

The additional bottles type AB may be installed in any position from horizontal to vertical (preferably with the connections vertically) and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the additional bottles, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

Make sure that the bottle is connected to the hydraulic circuit through suitable connection devices.

Make sure the gas is compatible with the elastomer of the seals.

Check that the max. allowed bottle pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants.

#### Maintenance

- Periodically check the pre-charge pressure of the system: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test yearly. For heavy-duty applications, check the pre-charge every 6 months.
- Periodically (yearly) carry out a visual inspection of the bottle in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the bottle.

#### Disassembly

If for failure, scheduled check or retest it is necessary to remove the additional bottle from the system, prior to removal, completely discharge the pressure within the circuit.

All additional EPE cylinders of the AB series can be repaired.

# Repair

It may consist in replacing the seals.

For reasons of functionality and security, it is recommended to use only original spare parts.

#### Demolition and recycling of the additional cylinder

Before demolition or recycling of the additional cylinder, you should always discharge the internal pressure.

If needed, proceed decontaminating in relation to the gas/fluid used prior to demolition.

Reproduction is forbidden.

In the spirit of continuous improvement, our products may be changed.